




New 404 Glideriter™ Pen

The new way to put words down! Uses Skrip® cartridges. Fluro Carbon tips are interchangeable and replaceable.

Tip replacement:

Unscrew tip holder from barrel and replace with new tip holder. Allow time for ink to saturate new tip before trying to write.

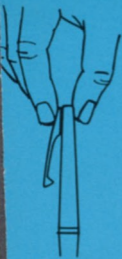


New ballpoints with press-clip feature

Press bottom of 'Safeguard' clip to propel point; press top of clip to retract point. Pressing top of clip opens clip wide, slips easily over pocket. Giant refill has smooth, long-writing stainless steel tip. Slim new modern design.



Skrip® cartridge filling

1. Grip point section and unscrew barrel.
2. Insert Skrip® cartridge into barrel, either end first.
3. Replace barrel and tighten.
4. When filling new pen first time, follow above procedure. Then remove barrel, squeeze cartridge gently to start ink flow to tip. Replace barrel.

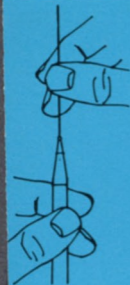

Loading Sheaffer Pencils

Hold barrel and turn cap clockwise until all lead is expelled and metal rod appears at point. Then turn back completely . . . insert lead . . . and press against a hard surface to engage the clutching mechanism.



SHEAFFER®

A **textron** COMPANY

GUARANTEE

Should this Sheaffer or any Sheaffer writing instrument fail to perform due to defective workmanship or materials, it will be put in first class condition or replaced free of charge when returned to the factory.

W. A. SHEAFFER PEN COMPANY —
Fort Madison, Iowa, U.S.A.

In Canada: Goderich, Ontario. In Australia: Melbourne. In Great Britain: Hemel Hempstead. In Argentina: Buenos Aires. In Brazil: Sao Paulo.

The name Sheaffer assures you of the finest in pens, pencils, ballpoints, desk sets, markers, Skrip® writing fluid, ballpoint refills, leads and erasers. Modern writing instruments designed for perfect balance and effortless writing. See your nearest Sheaffer dealer for the many other Sheaffer products you'll enjoy using and be proud to give as gifts.



Push Button Fill


Remove cap. Unscrew barrel, insert pen point in ink just far enough to submerge the air hole completely. Push button one to three times. Remove point from ink, wipe clean, replace barrel and you're ready to write. Push Button Fill may be removed at any time to adapt your pen to cartridge fill.



"Touchdown" pen filling

If your new Sheaffer loads with 'Touchdown' pen filling action

1. Unscrew tapered barrel end and pull plunger out to full length.
2. Immerse the point in Skrip® writing fluid.
3. Push plunger all the way down just once and hold 10 seconds. Pen fills completely on downstroke.
4. Tighten barrel end.

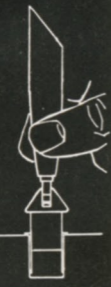

To assemble Desk Sets

Push socket into base until it clicks. Socket is now held firmly but swivels freely. You may remove socket by pulling it straight out.

Refinishing and Repair

If repairs are needed send only the part requiring attention: socket, base or pen. If chipped or broken bases are returned, you will receive a written quote of base exchange prices.